


### Parts Included

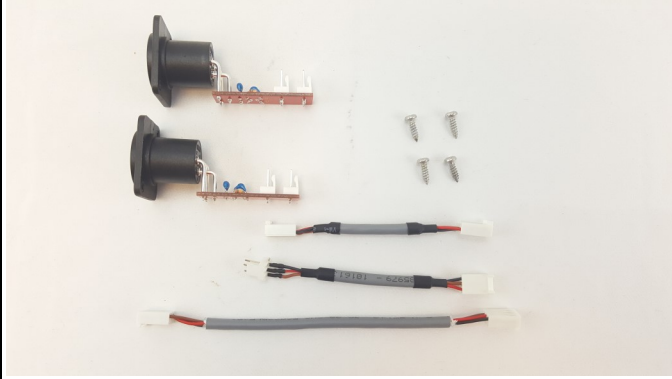

### Tools Required




## STEP BY STEP INSTALLATION

**Step 1)** Remove the six screws from the front of the Audio Box faceplate. Then, remove the Audio Box from the armored case.



**Step 2)** On the left side of the armored case, measure and mark 1 1/4" from the left and right side of the case.

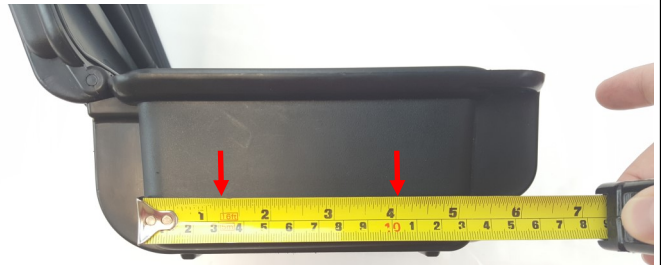

**Step 3)** Measure 1 1/2" down from the bottom lip of the armored case.



**Step 4)** Drill hole into the left side of case using 13/16" spade bit. Repeat for right side.



**Step 5)** Insert XLR board through hole in the side of the armored case.




**Step 6)** Use drill to insert screws into top left and bottom right of each XLR connector.




**Step 7)** Connect cables to XLR connectors as shown below.




**Step 8)** Disconnect J5 cable (1/4" Jack Cable) from Audio Box.

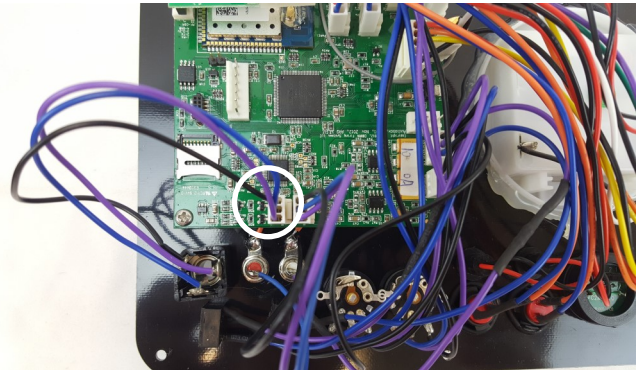

**Step 9)** Connect the cable that was previously plugged into J5, into male XLR cable.

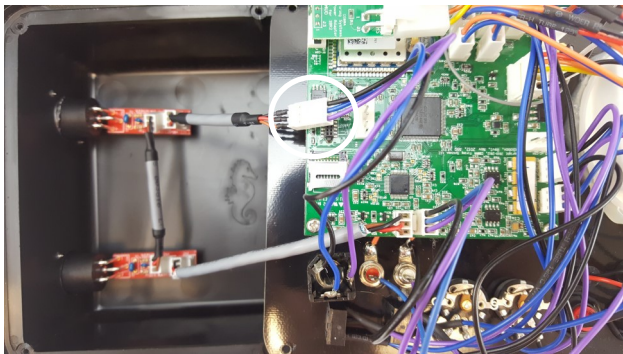

**Step 10)** Connect the 6" XLR cable into the J5 connector on the Audio Box board.

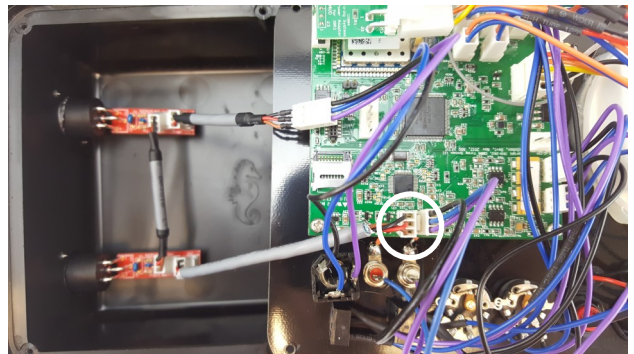

**Step 11)** Re-install the six screws of the front of the Audio Box.  
Congratulations, you are now finished with the XLR installation