
COBRA®



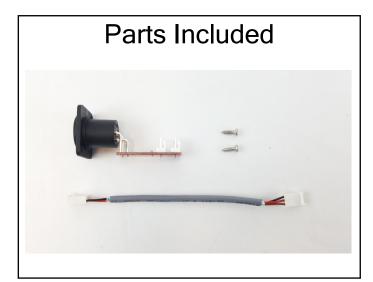

STEP BY STEP INSTALLATION

Step 1) Remove the six screws from the front of the Audio Box faceplate and the Audio Box from the armored case.



Step 2) On the left side of the armored case, measure and mark 2 3/4" into the middle of the side of the case.



Step 3) Measure and mark 1 1/2" down from the bottom lip of the armored case.



Step 4) Using the marks from steps 2 & 3, drill into the middle of the case using the 13/16" spade bit.



Step 5) Insert the XLR board through the hole in the side of the armored case.




Step 6) Use the drill and phillip bit to insert the included screws into the top left and bottom right of the XLR connector.




Step 7) Disconnect J5 cable (1/4" Jack Cable) from the Audio Box.



Step 8) Connect the XLR cable into the J5 connector on the Audio Box and the CN2 connector on the XLR board.

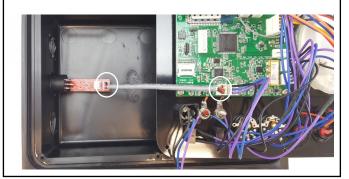

Step 9) Connect the cable that was plugged into J5 on the Audio Box, into the CN3 connector on the XLR board.

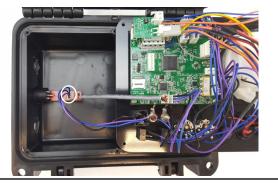

Step 10) Re-install the six screws into the front of the Audio Box faceplate. Do not over tighten.

